

Arming / Disarming Procedure

XT-30 / XR-150 Area System

ARMING:

Push **CMD** button until **ARM** **DISARM** appears on display.

Push top row button under the word **ARM**.

ENTER CODE: will appear on display. Enter your code now.

ARM ALL: **NO** **YES** will appear on display.

If you want to arm both areas, push the top row button under **YES**.
The 60 second arming countdown will begin, and red light will go on.

If you want to arm only one of the areas, push the top row button under **NO**.

AREA 1 **NO** **YES** will appear on the display.

If you want to arm Area 1, push the top row button under **YES**, if not push **NO**.

AREA 2 **NO** **YES** will appear on the display.

If you want to arm Area 2, push the top row button under **YES**, if not push **NO**.

Once you have made an arming choice for both areas, the 60 second arming countdown will begin.

DISARMING:

When an Entry/Exit door is opened, **ENTER CODE:** will appear on display.

Enter your code now.

DISARM ALL: **NO** **YES** will appear on display.

If you want to disarm both areas, push the top row button under **YES**.

ALL SYSTEM OFF will appear on the display and red light will go off.

If you want to disarm only one of the areas, push the top row button under **NO**.

AREA 1 **NO** **YES** will appear on the display.

If you want to disarm Area 1, push the top row button under **YES**, if not push **NO**.

AREA 2 **NO** **YES** will appear on the display.

If you want to disarm Area 2, push the top row button under **YES**, if not push **NO**.

If you have disarmed only one area, the red light will remain on, and the currently armed area number will appear on the display.