

Arming / Disarming Procedure

XT-30 All / Perimeter System

ARMING with User Code Required:

Make sure all doors are closed and there is no movement in motion detector areas.

Enter User Code on the keypad, **PERIM ALL** will appear on screen

Push top row button under desired action. **PERIM** will arm doors only, **ALL** will arm all devices including motion detectors.

The **EXIT** countdown will begin on the screen. You have 60 seconds to exit the building before the system arms.

If the exit door is re-opened before the 60 second countdown ends, the countdown will reset to 60 seconds.

If a door has been left open, or there is movement in a motion detected area at arming, the keypad will display **ZONE # and ZONE DESCRIPTION FAULT**. The keypad will then display the options **OKAY BYPASS STOP**.

OKAY: The faulted zone will arm automatically after the zone has maintained a “good” state for one hour.

BYPASS: The faulted zone will be bypassed by the system and will not arm.

STOP: The system will stop the arming process so the faulted zone can be corrected.

ARMING with Easy Arm Function Enabled:

Make sure all doors are closed and there is no movement in motion detector areas.

Push and hold the **#1 (ALL)** button for 3 seconds. Keypad will beep, indicator light will turn **RED**, and the **EXIT** countdown will begin.

All other arming and exit functions perform the same as listed above.

DISARMING:

Enter User Code on the keypad. No other entries are required.

SILENCING / CANCELLING ALARM:

Enter User Code on the keypad. This will silence the siren. **CANCEL** **VERIFY** will appear on the screen. Note: Siren will time out after 15 minutes.

Push the top row button under **CANCEL** to cancel the alarm with Central Station, push the top row button under **VERIFY** to verify an actual alarm with Central Station. Note: Central Station protocols may not be cancelled if alarm has sounded longer than 30 seconds.